

## HYDRO-BLOK® PARTS CATALOG

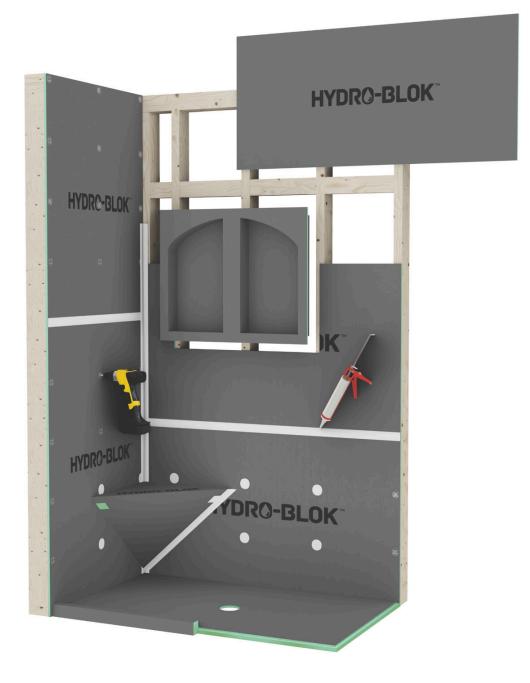

### **The BETTER Shower System**

### WALLBOARDS & BUILDING PANELS

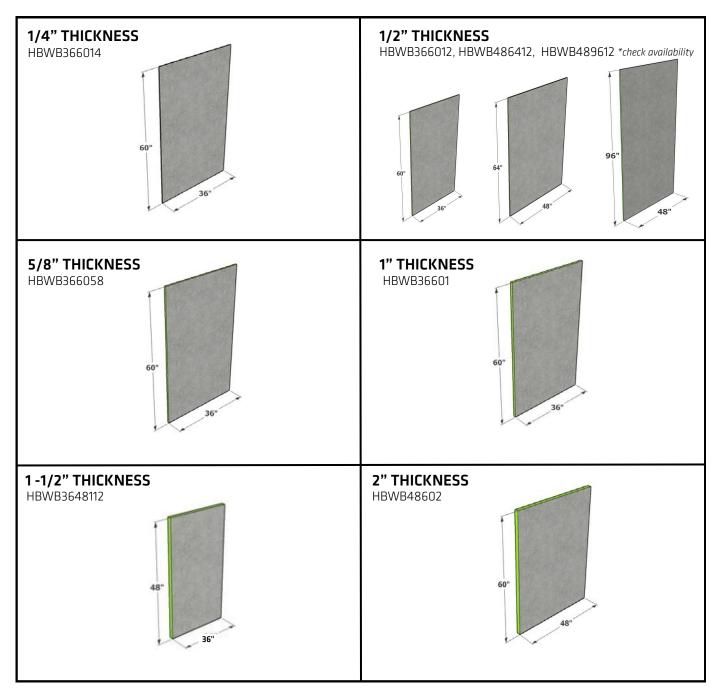



Notes


1. Installation to be completed in accordance with manufacture specifications

2. Drawings not to scale.

Hydro-Blok USA 6029 238th St SE, Woodinville, WA 98072 www.hydroblokusa.com T:425-286-6840 F:425-286-6854 Wallboards/Panels See Above Drawings For Part Numbers


### **LOW-PROFILE SHOWER PANS**



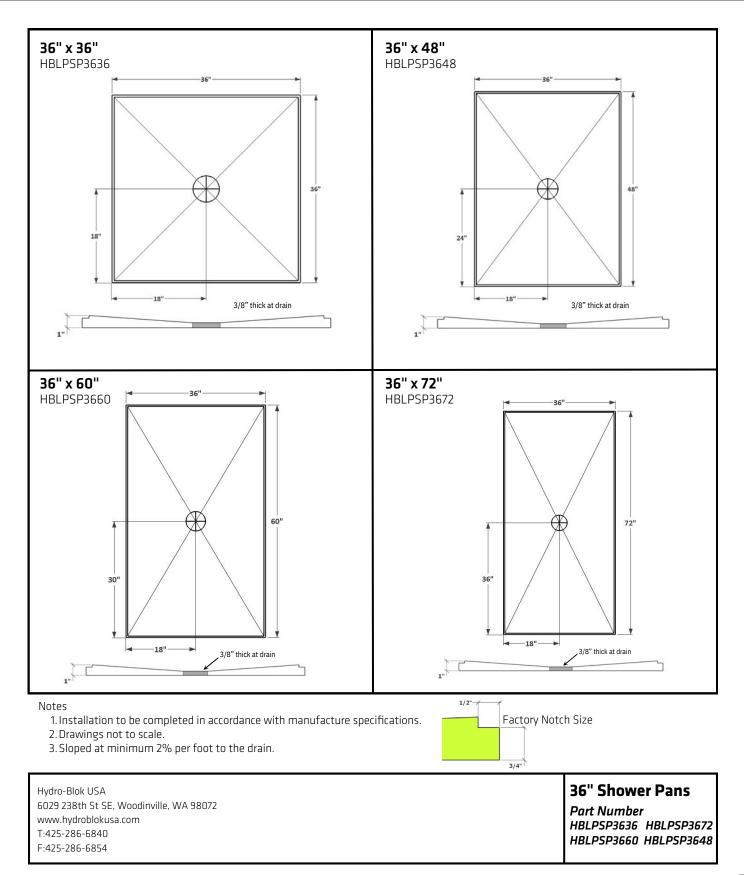


### **LOW-PROFILE SHOWER PANS**



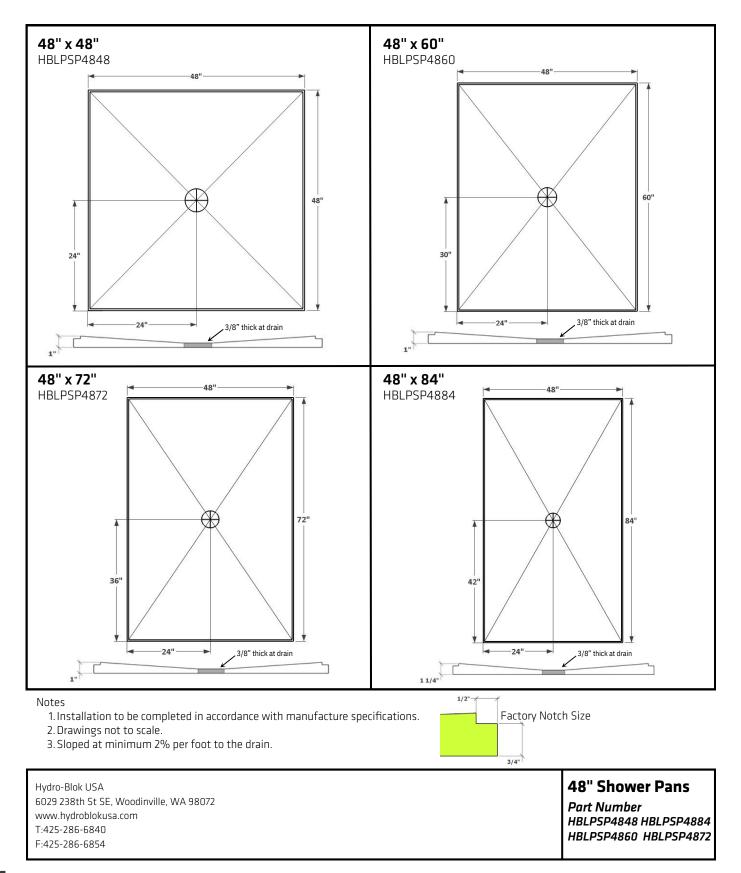


### **LOW-PROFILE SHOWER PANS**



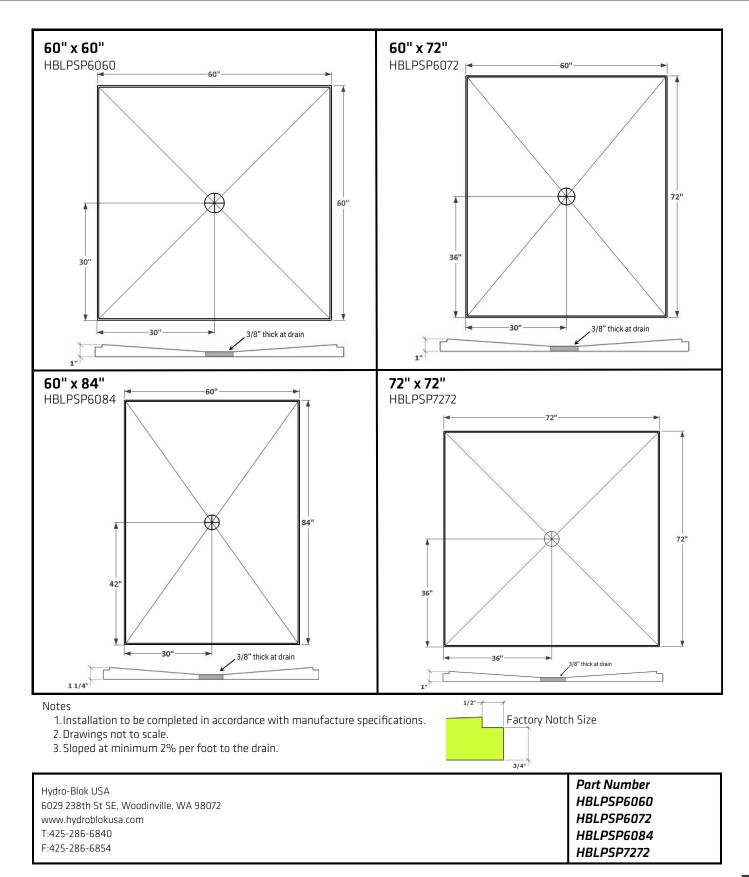


### **OFF-SET DRAIN SHOWER PANS**



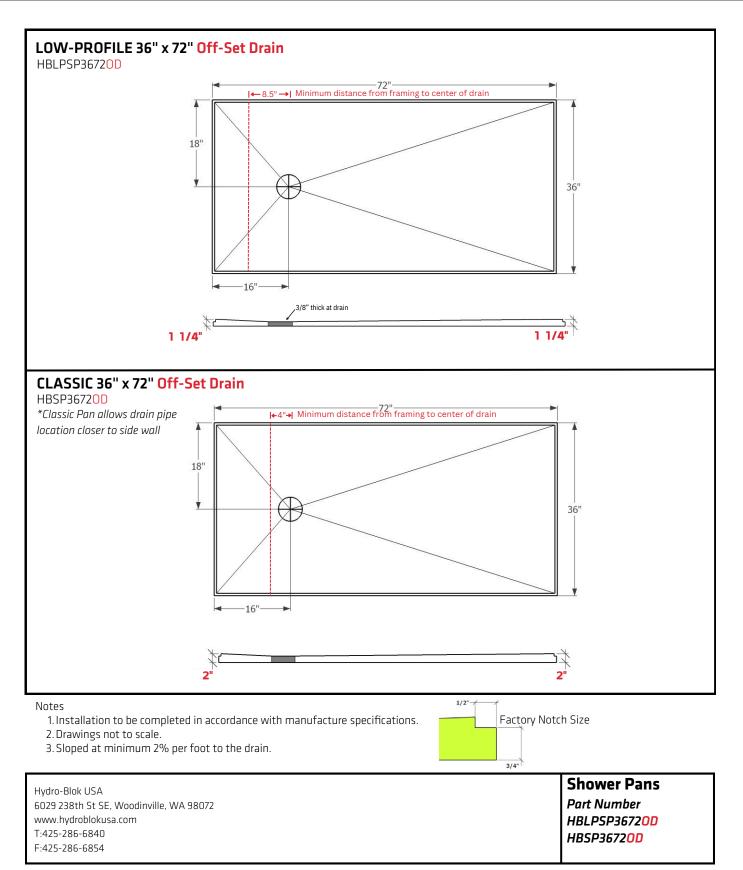

### **LOW-PROFILE EXTENSIONS & RAMP**



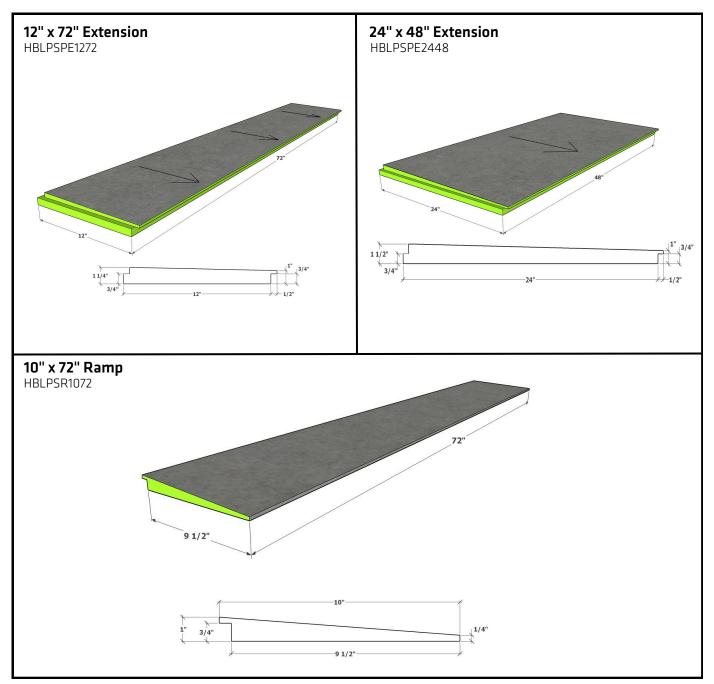

Notes

1. Installation to be completed in accordance with manufacture specifications.

2. Drawings not to scale.


3. Extensions are sloped at minimum 2% per foot to the drain.

4. Ramps are ADA compliant

Hydro-Blok USA	Extensions & Ramp
6029 238th St SE, Woodinville, WA 98072	Part Number
www.hydroblokusa.com	HBLPSPE1272
T:425-286-6840	HBLPSPE2448
F:425-286-6854	HBLPSR1072

### **LOW-PROFILE SHOWER CURB**



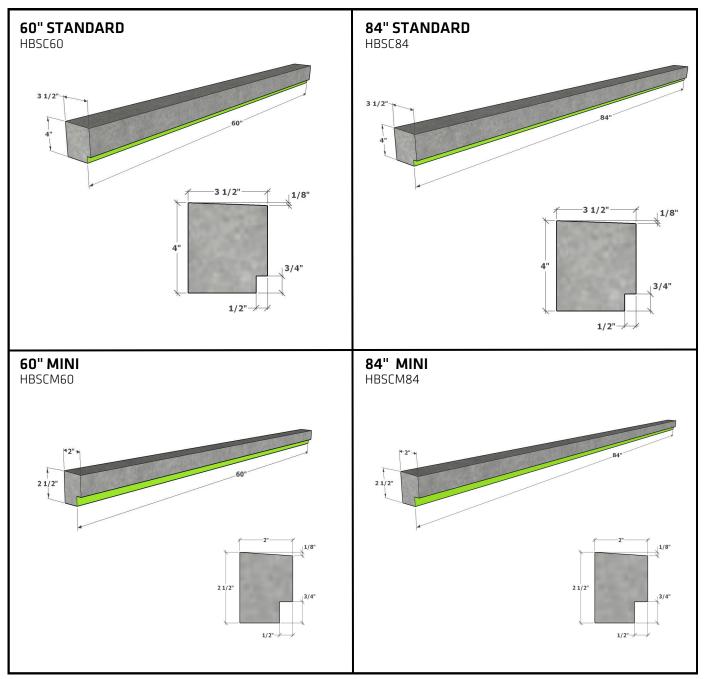

Notes


1. Installation to be completed in accordance with manufacture specifications.

2. Drawings not to scale.

Hydro-Blok USA	Shower Curbs
6029 238th St SE, Woodinville, WA 98072 www.hydroblokusa.com	Part Number
T:425-286-6840	HBSC60 HBSC84 HBSCM60 HBSCM84
F:425-286-6854	

### **SOAP NICHES**



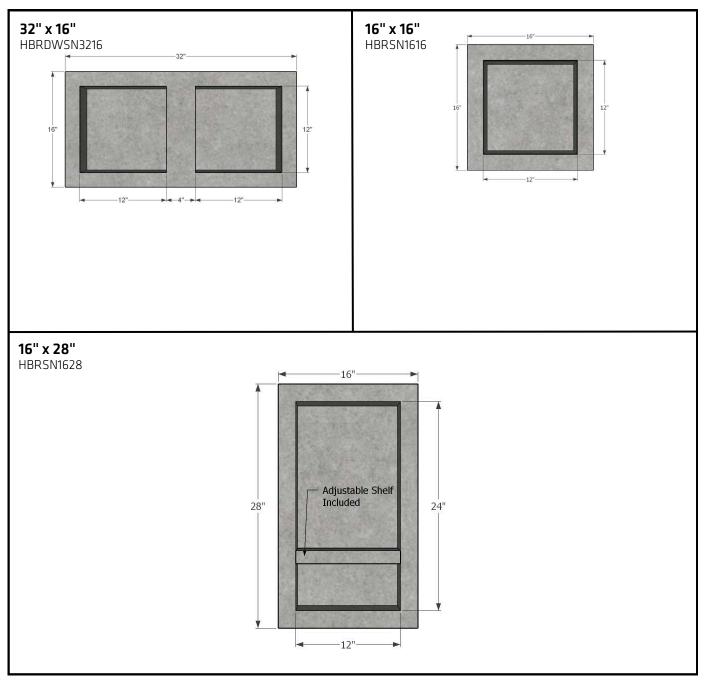

Notes


1. Installation to be completed in accordance with manufacture specifications.

2. Drawings not to scale.

Hydro-Blok USA	Shower Niches
6029 238th St SE, Woodinville, WA 98072	Part Number
www.hydroblokusa.com	HBRDWSN3216
T:425-286-6840	HBRSN1616
F:425-286-6854	HBRSN1628

### **BUILDING BOARD BENCH**



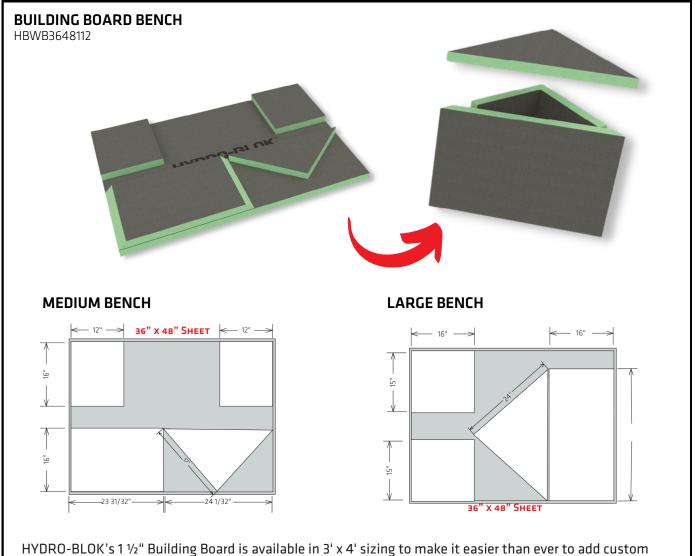

HYDRO-BLOK's 1 ½" Building Board is available in 3' x 4' sizing to make it easier than ever to add custom features in your new HYDRO-BLOK shower. Custom shower benches are in high demand and they are easier and more cost-effective than ever before with this new building board size. Add a space-saving corner bench in two sizes using only ONE sheet of HYDRO-BLOK 1½" 3' x 4' Building Board or use two sheets to build a box-style shower bench


Notes

1. Installation to be completed in accordance with manufacture specifications. 2. Drawings not to scale.

Hydro-Blok USA 6029 238th St SE, Woodinville, WA 98072 www.hydroblokusa.com T:425-286-6840 F:425-286-6854

### **BENCHES & SHAMPOO CADY**



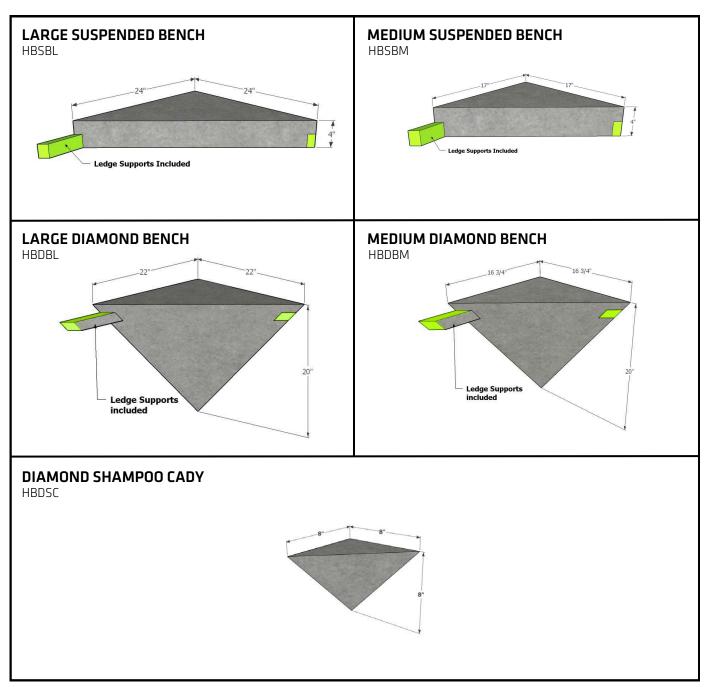

Notes


1. Installation to be completed in accordance with manufacture specifications.

2. Drawings not to scale.

Hydro-Blok USA	Benches
6029 238th St SE, Woodinville, WA 98072 www.hydroblokusa.com T:425-286-6840 F:425-286-6854	Part Number HBSBL HBSBM HBDBL HBDBM HBDSC

### SINGLE SLOPE SHOWER PANS



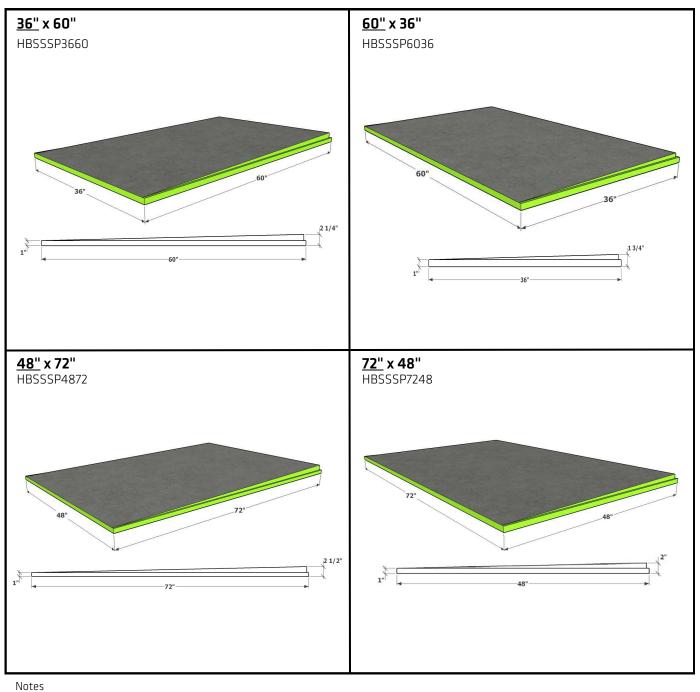

1. Installation to be completed in accordance with manufacture specifications.


- 2. Drawings not to scale.
- 3. Sloped at 1/4" per foot to the drain.

4. Line Drain will attach to pan on thin edge. <u>Underlined dimension in pan part number indicates edge for drain attachment.</u>

Hydro-Blok USA	Single Slope Pans
6029 238th St SE, Woodinville, WA 98072	Part Number
www.hydroblokusa.com	HBSSSP3660 HBSSSP6036
T:425-286-6840	HBSSSP4872 HBSSSP7248
F:425-286-6854	1103357407211033377240

## SINGLE SLOPE SHOWER SIDE EXTENSION & LINE DRAIN KIT




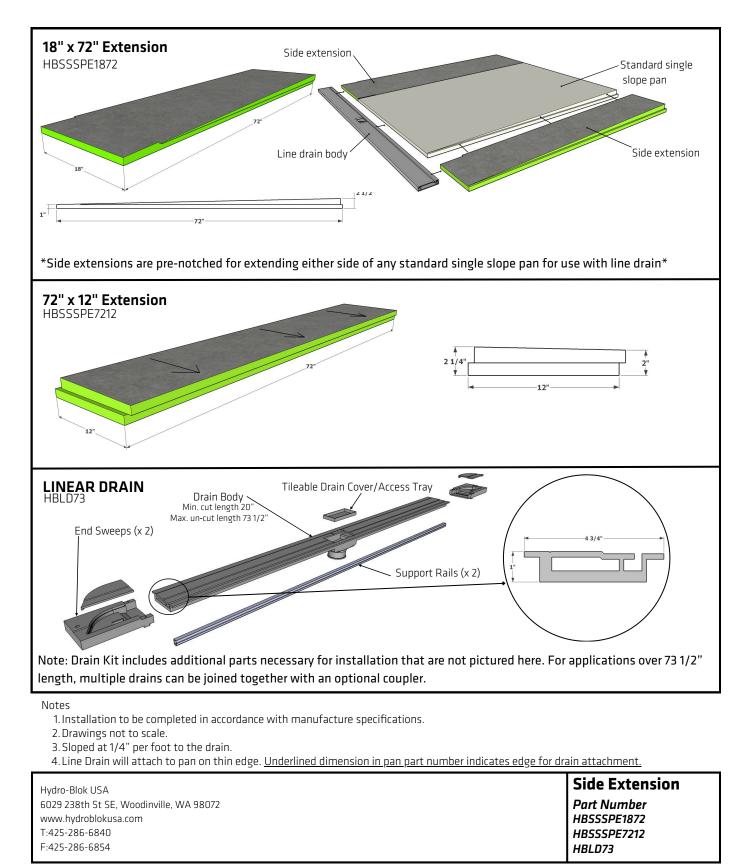

13

### SUBFLOOR LOWERING KIT



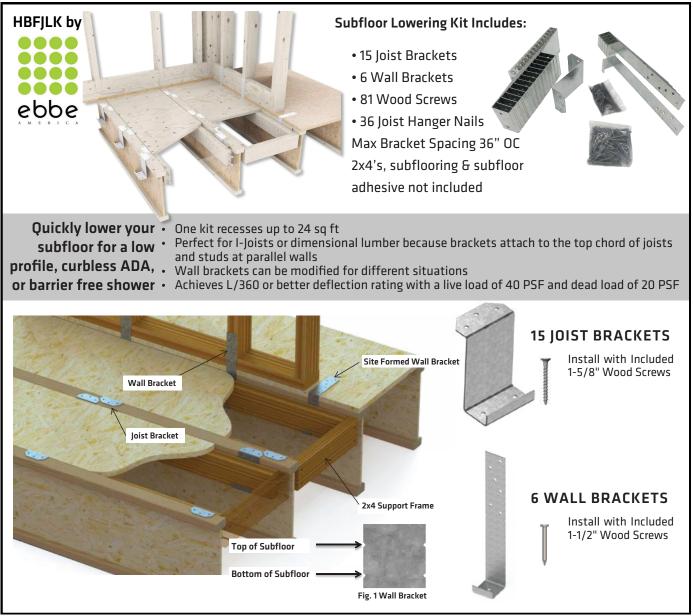


#### Installation

- 1. Remove subfloor to walls and joists as needed. Sub-floor should not overhang the joist bay or be left unsupported.
- 2. Install joist and wall brackets. Brackets should be spaced a maximum of 36" on center to achieve L/360 with a live load of 40PSF and a dead load of 20PSF. Structural grade #2 or better douglas fir, larch or pine.
- Use screws to attach joist brackets and joist hanger nails to attach wall brackets
- Wall brackets can be bent onsite if needed (nail to subfloor or bottom plate then use hammer to bend the bracket down). Notches on wall bracket represent top and bottom of subfloor (see fig. 1).
- Create 2x4 frame as shown and place frame into hangers. Best practice recommends subfloor adhesive and screws at hanger seats.
   Install subfloor to 2x4 frame with adhesive and screws.

Hydro-Blok USA	Floor Lowering Kit
6029 238th St SE, Woodinville, WA 98072	Part Number
www.hydroblokusa.com	HBFJLK
T:425-286-6840	
F:425-286-6854	

### LINE DRAIN PLUMBING PREP



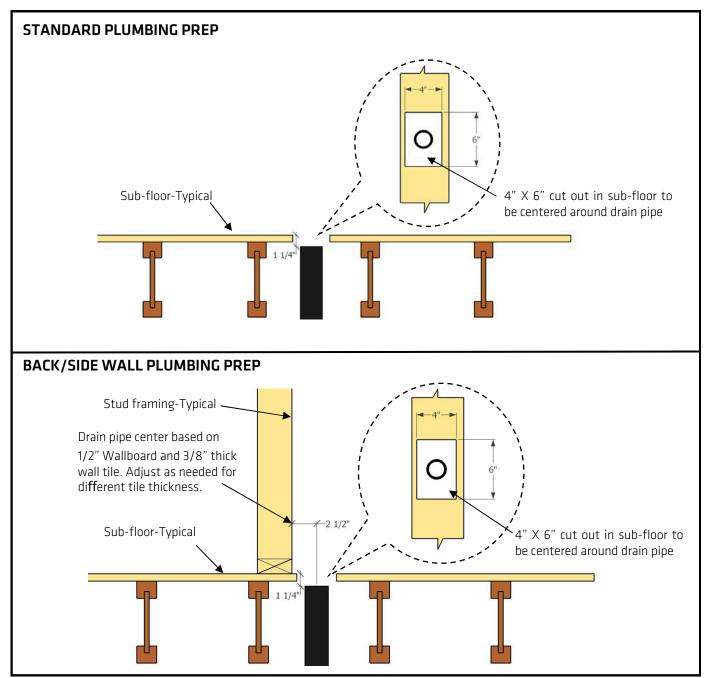

Notes

1. Installation to be completed in accordance with manufacturer specifications.

2. Drawings not to scale.


3. Single Slope Pans are sloped at 1/4" per foot to the drain.

4. Line Drain will attach to pan on thin edge.

Hydro-Blok USA	Line Drain
6029 238th St SE, Woodinville, WA 98072	Plumbing Prep
www.hydroblokusa.com	
T:425-286-6840	
F:425-286-6854	

### PAN JOINT DETAIL



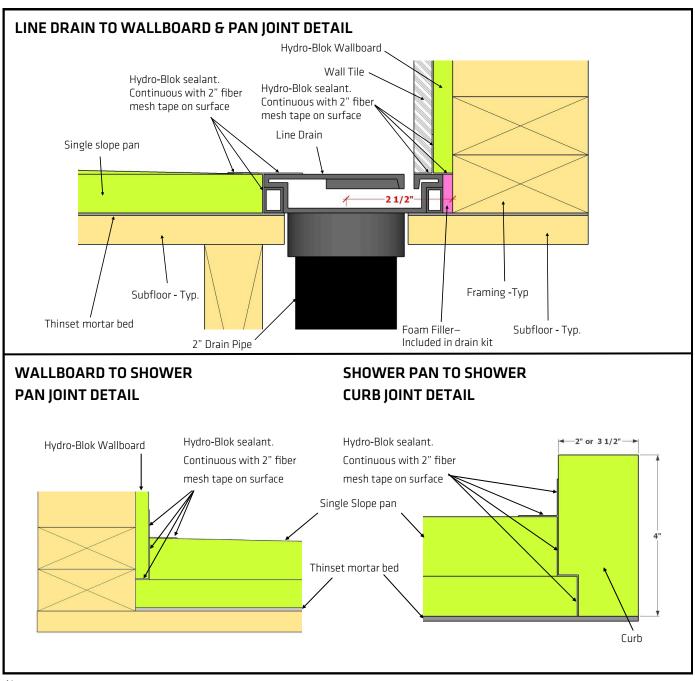

Notes


1. Installation to be completed in accordance with manufacturer specifications.

- 2. Drawings not to scale.
- 3. Sloped at 1/4" per foot to the drain.

Hydro-Blok USA	Pan Joint Detail
6029 238th St SE, Woodinville, WA 98072	
www.hydroblokusa.com	
T:425-286-6840	
F:425-286-6854	

# AYDRO-BLOK

### PAN JOINT DETAIL AT FIRE RATED WALL

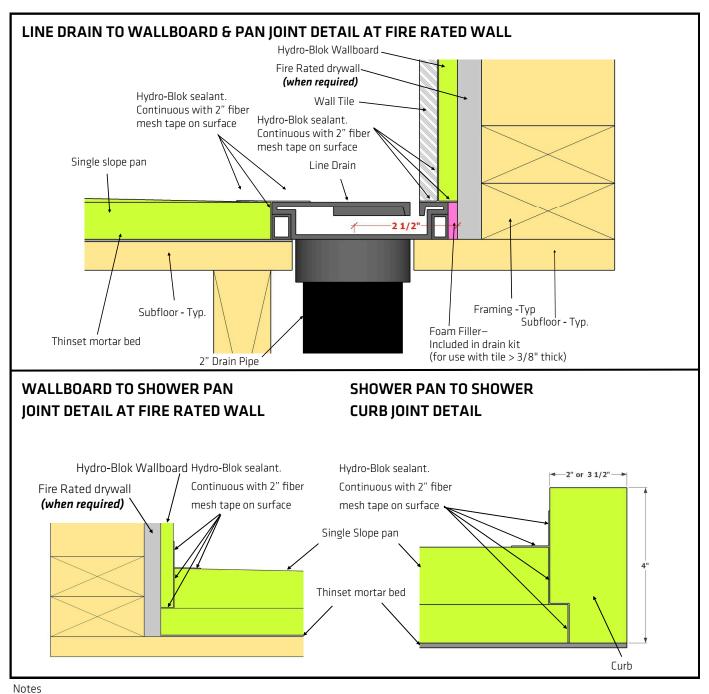


1. Installation to be completed in accordance with manufacturer specifications.

- 2. Drawings not to scale.
- 3. Sloped at 1/4" per foot to the drain.

Hydro-Blok USA	Pan Joint Detail
6029 238th St SE, Woodinville, WA 98072	
www.hydroblokusa.com	
T:425-286-6840	
F:425-286-6854	

#### THIN SINGLE SLOPE SHOWER PANS \*\*For use only with lowered drain detail\*\*



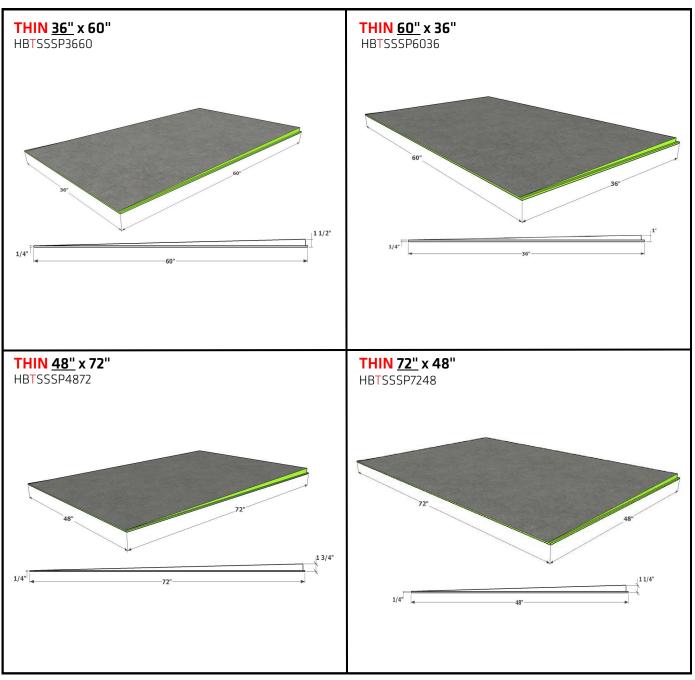

Notes

1. Installation to be completed in accordance with manufacture specifications.

2. Drawings not to scale.


3. Sloped at 1/4" per foot to the drain.

4. Line Drain will attach to pan on thin edge. <u>Underlined dimension in pan part number indicates edge for drain attachment.</u>

Hydro-Blok USA 6029 238th St SE, Woodinville, WA 98072	THIN Single Slope Pans
www.hydroblokusa.com	Part Number
T:425-286-6840	HBTSSSP3660 HBTSSSP6036
F:425-286-6854	HBTSSSP4872 HBTSSSP7248

## THIN SINGLE SLOPE SHOWER SIDE EXTENSION



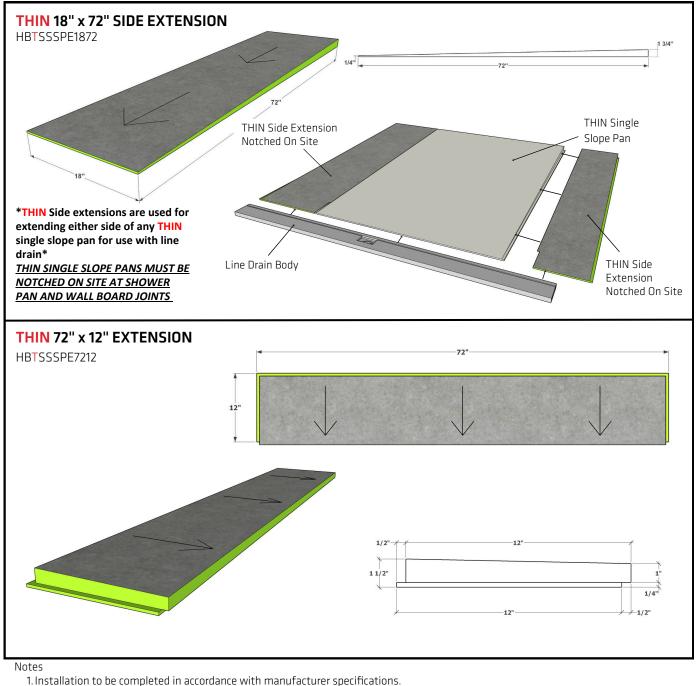


- 2. Drawings not to scale.
- 3. Sloped at 1/4" per foot to the drain.
- 4. Not compatible with 60x36 Thin Single Slope Pan. Contact Hydro-Blok USA for extending this size pan.
- 5. Additional filler under pan extension is required when used with 48x72 and 36x60 Thin Single Slope Pans due to thickness differences.

nyulo-blok OSA	THIN Side Extension
6029 238th St SE, Woodinville, WA 98072	Extension
www.hydroblokusa.com	Part Number
T:425-286-6840	HBTSSSPE1872
F:425-286-6854	HBTSSSPE7212

## TYPICAL BARRIER-FREE SHOWER USING GLASS PANEL AT ENTRY



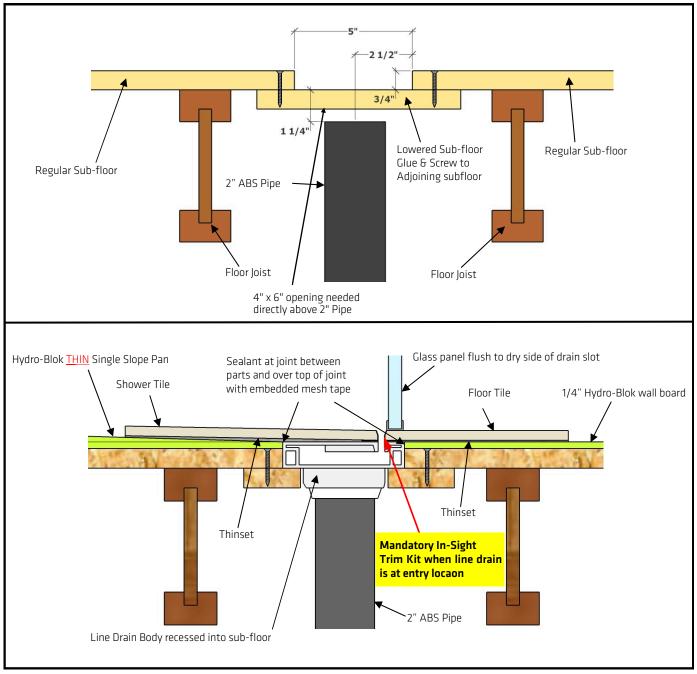


#### Notes

1. Installation to be completed in accordance with manufacturer specifications.

- 2. Drawings not to scale.
- 3. Sloped at 1/4" per foot to the drain.
- 4. Line Drain will attach to pan on thin edge.

Hydro-Blok USA 6029 238th St SE, Woodinville, WA 98072 www.hydroblokusa.com T:425-286-6840 F:425-286-6854 **Barrier Free Detail** For use with THIN Profile Single Slope Pans

### BARRIER-FREE SHOWER WITH DOUBLE DROP IN SUB-FLOOR

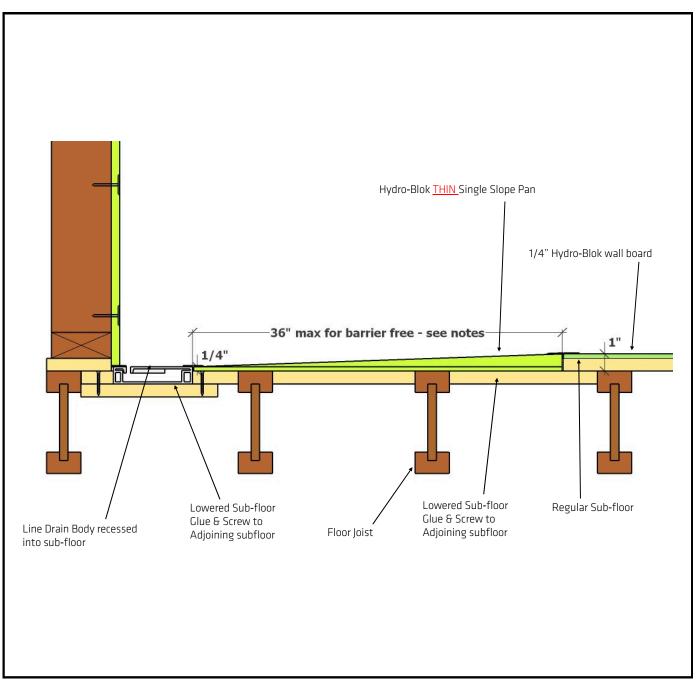

Notes

1. Installation to be completed in accordance with manufacturer specifications.

2. Drawings not to scale.

3. Sloped at 1/4" per foot to the drain. Pan bigger than 36" dimension noted above will be too thick for this detail to work


4. Line Drain will attach to pan on thin edge.

	<b>Barrier Free Detail</b>
	For use with Thin Profile
www.hydroblokusa.com	Single Slope Pans
T:425-286-6840	
F:425-286-6854	

YDRO-BLO

### BARRIER-FREE SHOWER USING THIN PROFILE SINGLE SLOPE SHOWER PANS



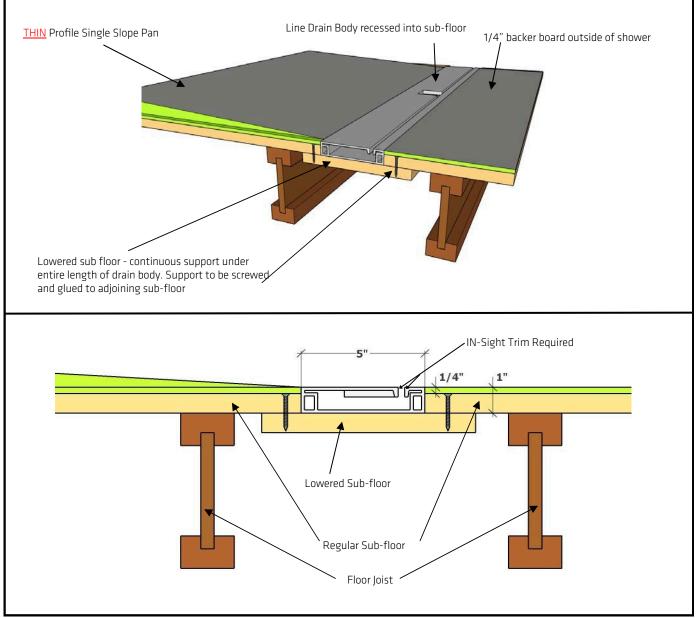

#### Notes

1. Installation to be completed in accordance with manufacturer specifications.

- 2. It is ideal to center the drain body in the length of the overall layout. Maximum length of un-cut drain is 73 3/8"
- 3. Longer applications can use the line drain coupler (sold separately) to join multiple drains together if necessary.


4. Be aware that joining multiple line drains together will require a separate waste pipe connection for each line drain.

- 5. Drawings not to scale.
- 6. Sloped at 1/4" per foot to the drain.

7. Line Drain will attach to pan on thin edge.

Hydro-Blok USA 6029 238th St SE, Woodinville, WA 98072 www.hydroblokusa.com	<b>Barrier Free Detail</b> For use with Thin Profile Single Slope Pans
T:425-286-6840	
F:425-286-6854	

## THIN SINGLE SLOPE PAN WITH LINE DRAIN RECESSED IN CONCRETE SLAB

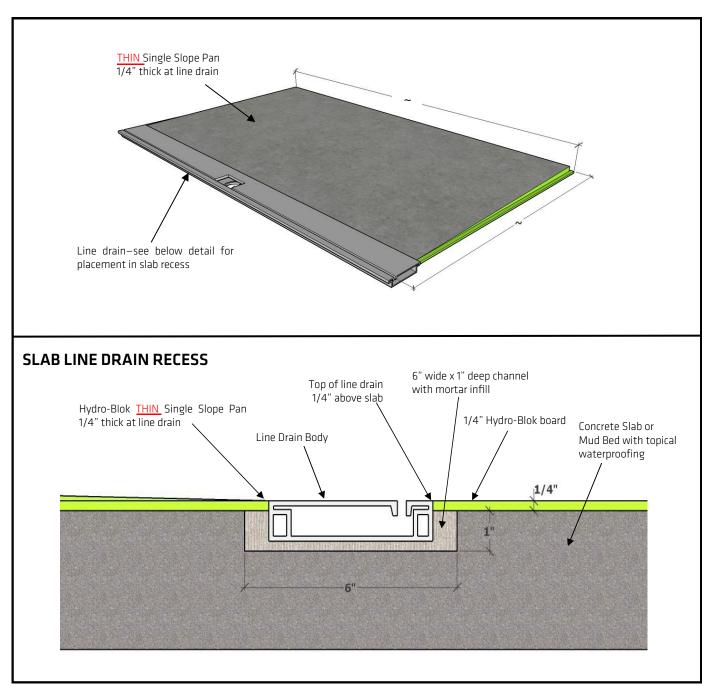

Notes

1. Installation to be completed in accordance with manufacturer specifications.

2. Drawings not to scale.

3. Sloped at 1/4" per foot to the drain.

Hydro-Blok USA 6029 238th St SE, Woodinville, WA 98072 www.hydroblokusa.com T:425-286-6840 F:425-286-6854 **Barrier Free Detail** For use with Thin Profile Single Slope Pans


YDRO-BLO



### **IN-SIGHT - LINE DRAIN TILE TRIM KITS**

#### HBINSI12 (1/2"), HBINSI38 (3/8"), HBINSI14 (1/4")

In-Sight Trim gives the upon of having a metal finished edge along the length of the line drain gap \*\*Trim kit is required and mandatoy when drain is located at the shower entry threshold\*\*

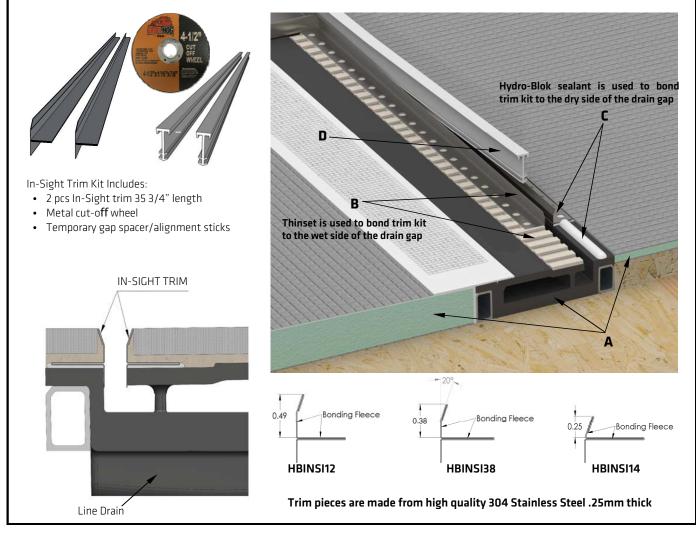

A. Install Hydro-Blok line drain, shower pan and wallboard per typical specs. Use included cut-off wheel to cut trim to length as needed. B. On shower/wet side of drain gap use thinset along entire length of drain to bond trim piece to drain body. Firmly press trim into thinset and position in place. Remove any excess thinset from drain slot if necessary.

C. On dry side of drain gap run a continuous bead of Hydro-Blok sealant along the entire length of drain to bond trim piece to drain body. Firmly press trim piece into sealant bead and adjust into position. Trim pieces should run the entire length of line drain.

D. <u>Before thinset & sealant sets up</u>, insert supplied plastic spacer sticks into gap between the trim pieces. This will properly space the trim pieces and hold them in position while thinset and sealant cures. Leave this temporary spacer in place while tiling to keep debris out of drain slot. <u>Remove plastic gap spacer sticks before putting shower into use</u>.

\*\* PLEASE NOTE: When cutting trim to desired length it is best practice to place all cut edges at the outer ends of line drain. This will allow factory edges to be butted together when using multiple trim pieces.


Hydro-Blok USA	Line Drain Trim Kit
6029 238th St SE, Woodinville, WA 98072	Part Numbers
www.hydroblokusa.com	HBINSI12 (1/2")
T:425-286-6840	HBINSI38 (3/8")
F:425-286-6854	HBINSI14 (1/4")



### **IN-SHADOW - LINE DRAIN TILE TRIM KITS**

#### HBINSHADOW

In-Shadow Trim allows line drain slot to be concealed under the vertical wall tile

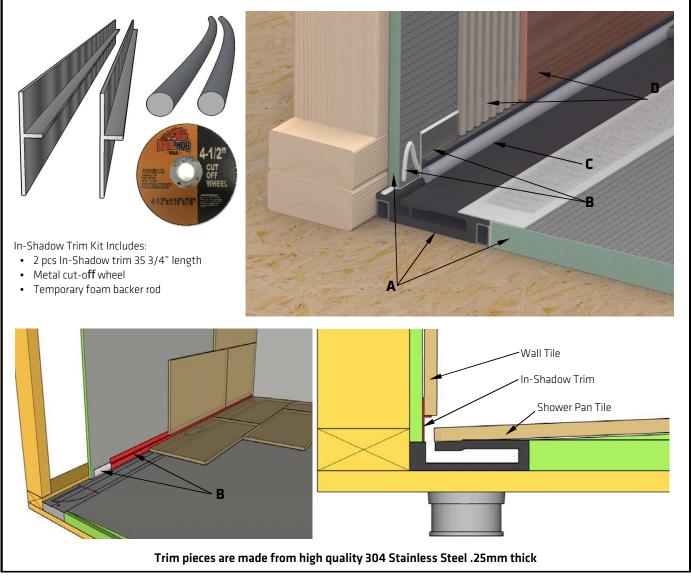


A. Install Hydro-Blok line drain, shower pan and wallboard per typical specs. Use included cut-off wheel to cut trim to length as needed.
B. Run a heavy continuous bead of Hydro-Blok sealant along the wallboard face that will receive the In-Shadow trim. Firmly press trim piece into sealant bead and adjust into final position before sealant sets up. Trim pieces should run the entire length of line drain.
C. Insert supplied round foam backer rod into drain slot. This is temporary and will keep debris out of drain slot during tiling.
D. Apply thinset over face of trim and onto wallboard for setting tile. Bottom edge of tile should rest on horizontal lip of trim piece. Do not use sealant on this boom edge of tile. This will allow for any water to weep under tile and down the drain if necessary.

\*\* PLEASE NOTE: In-Shadow trim can be used with 1/4" - 3/8" shower pan tile. When cutting trim to desired length it is best practice to place all cut edges at the outer ends of line drain. This will allow factory edges to be butted together when using multiple trim pieces.

Hvdro-Blok USA	Line Drain Trim Kit
6029 238th St SE, Woodinville, WA 98072	Part Numbers
www.hydroblokusa.com	HBINSHADOW
T:425-286-6840	
F:425-286-6854	

### LINE DRAIN SLOT EXTENDER



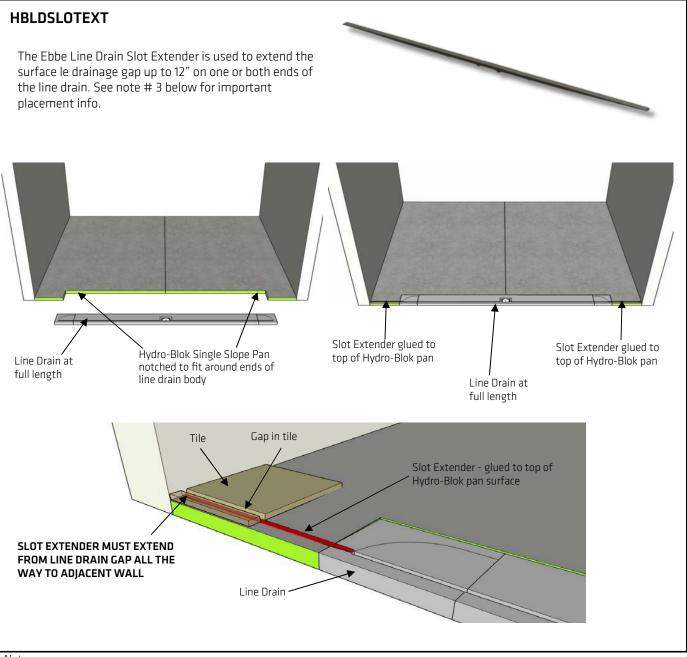

#### Notes:

1. Installation to be completed in accordance with manufacturer specifications.


2. Maximum length of un-cut line drain is 73 3/8"

3. The gap at the slot extender will only be as deep as the tile thickness. To avoid potential spillage over the gap extension it is recommended to use the Slot Extender only in areas that will get minimal water exposure during normal use. If this is not possible, a line drain coupler with 2 line drains is advised for effective drainage.

	Line Drain Slot Extender
www.hydroblokusa.com	Part Numbers
T:425-286-6840	HBLDSLOTEXT
F:425-286-6854	

### LINE DRAIN COUPLER



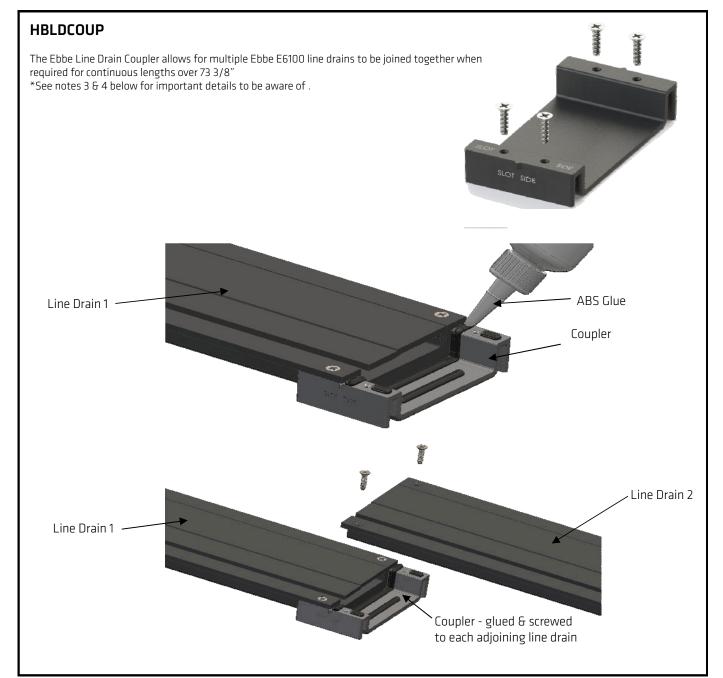

Notes:

1. Installation to be completed in accordance with manufacturer specifications.

2. Maximum length of un-cut line drain is 73 3/8"


3. Be aware that joining multiple line drains together will require a separate waste pipe connection for each line drain.

4.\*\*Important: Coupler joint location must be centered between the 2 line drain waste pipe connections for proper drainage.

Hydro-Blok USA	Line Drain Coupler
6029 238th St SE, Woodinville, WA 98072	Part Numbers
www.hydroblokusa.com	HBLDCOUP
T:425-286-6840	
F:425-286-6854	1

### LINE DRAIN FOR BATH TUB RETRO FIT



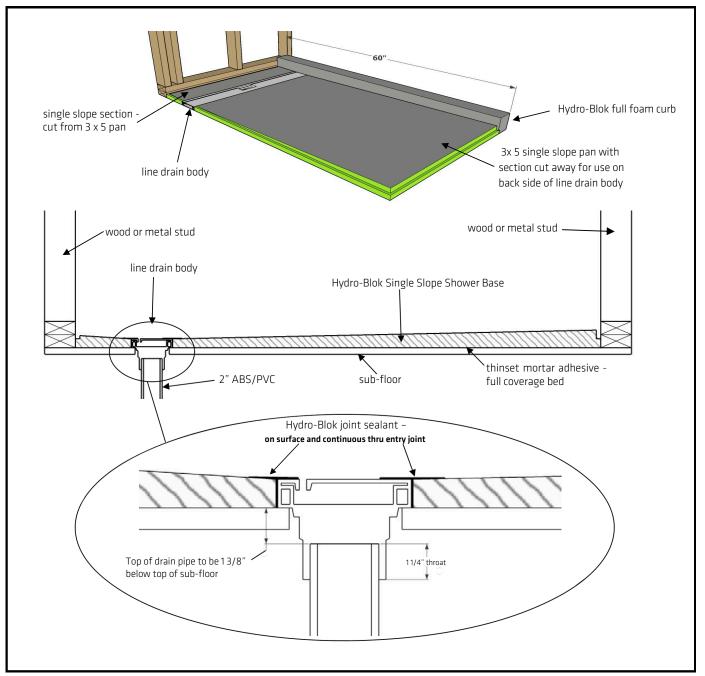

Notes

1. Installation to be completed in accordance with manufacturer specifications.


2. Drawings not to scale.

3. Sloped at minimum 1/4" per foot to the drain.

Hydro-Blok USA 6029 238th St SE, Woodinville, WA 98072	Line Drain for Bath Tub Retro Fit
www.hydroblokusa.com	
T:425-286-6840	
F:425-286-6854	
	1

## SHOWER BASE WITH FULL FOAM CURB & CURB-LESS ENTRY



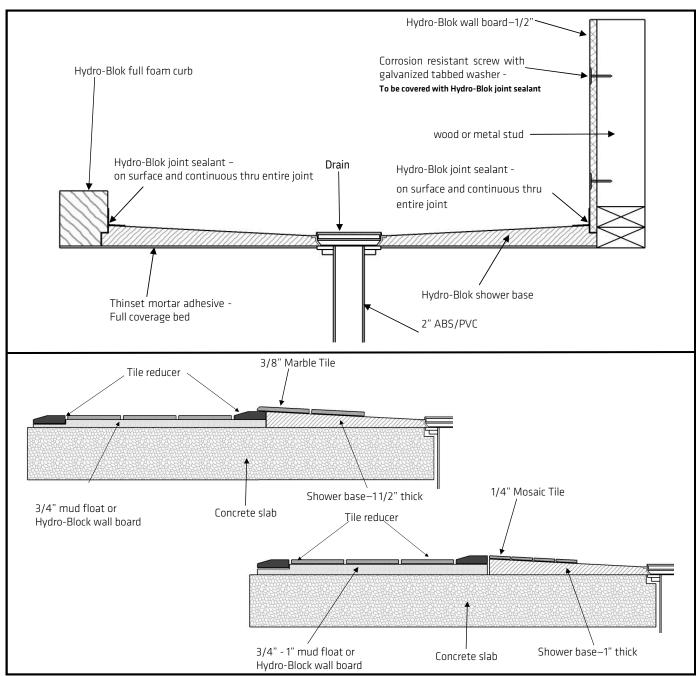

Notes

1. Installation to be completed in accordance with manufacturer specifications.


2. Drawings not to scale.

3. Sloped at minimum 1/4" per foot to the drain.

Hydro-Blok USA 6029 238th St SE, Woodinville, WA 98072 www.hydroblokusa.com T:425-286-6840 F:425-286-6854	Shower Base with Full Foam Curb & Shower Base With Curb-less entry
---	---

### **PIPE SEALS**



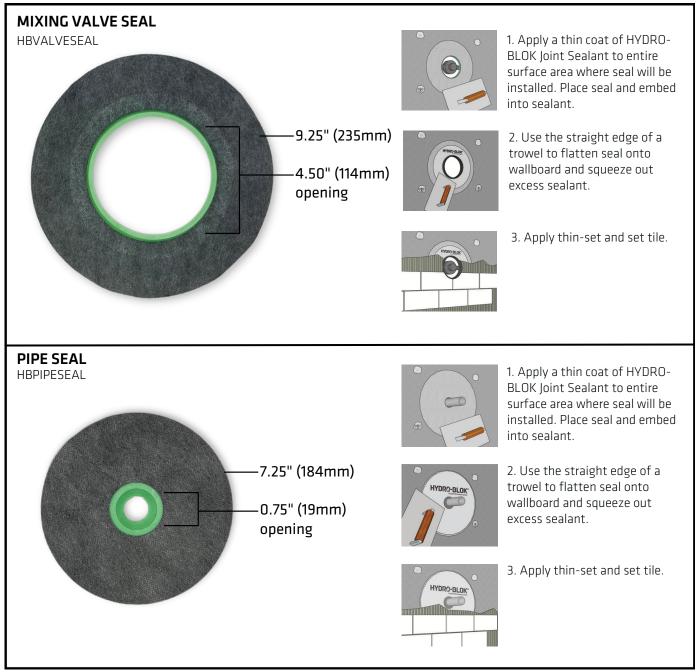

Notes

1. Installation to be completed in accordance with manufacturer specifications.

2. Drawings not to scale.

Hydro-Blok USA	Pipe Seals
6029 238th St SE, Woodinville, WA 98072	
www.hydroblokusa.com	
T:425-286-6840	
F:425-286-6854	

### UNCOUPLING MEMBRANE





Notes

1. Installation to be completed in accordance with manufacturer specifications.

2. Drawings not to scale.

Hydro-Blok USA 6029 238th St SE, Woodinville, WA 98072 www.hydroblokusa.com T:425-286-6840 F:425-286-6854	Uncoupling Membrane & Quick Shim Kits
---	---

### HYDRO-BLOK®

Low-Profile Show	wer Pans & Extensions		Shower Benches		
HBLPSP3636	36" x 36" LOW PROFILE Shower Pan	pg 3	HBDBM	Diamond Bench Medium 17" x 17"	pg 11
HBLPSP3648	36" x 48" LOW PROFILE Shower Pan	pg 3	HBDBL	Diamond Bench Large 22" x 22"	pg 11
HBLPSP3660	36" x 60" LOW PROFILE Shower Pan	pg 3	HBSBM	Suspended Bench Medium 17" x 17"	pg 11
HBLPSP3672	36" x 72" LOW PROFILE Shower Pan	pg 3	HBSBL	Suspended Bench Large 22" x 22"	pg 11
HBLPSP36720D	36" x 72" LOW PROFILE Shower Pan - Offset Drain	pg 6	Linear Drain & Acce	ssories	
HBLPSP4848	48" x 48" LOW PROFILE Shower Pan	pg 4	HBLD73	73½" Line Drain Kit	pg 13
HBLPSP4860	48" x 60" LOW PROFILE Shower Pan	pg 4	HBFLJCK	Subfloor Lowering Kit	pg 14
HBLPSP4872	48" x 72" LOW PROFILE Shower Pan	pg 4	HBINSHADOW	IN-Shadow Trim Kit	pg 25
HBLPSP4884	48" x 84" LOW PROFILE Shower Pan	pg 4	HBINSI38	3/8" IN-Sight Trim Kit	pg 24
HBLPSP6060	60" x 60" LOW PROFILE Shower Pan	pg 5	HBINSI14	1/4" IN-Sight Trim Kit	pg 24
HBLPSP6072	60" x 72" LOW PROFILE Shower Pan	pg 5	HBINSI12	1/2" IN-Sight Trim Kit	pg 24
HBLPSP6084	60" x 84" LOW PROFILE Shower Pan	pg 5	HBLDAFT38	3/8" Tile-In Access Tray (replacement)	
HBLPSP7272	72" x 72" LOW PROFILE Shower Pan	pg 5	HBLDAFT14	1/4" Tile-In Access Tray	
HBLPSPE1272	12" x 72" LOW PROFILE Pan Extension	pg 7	HBLDAFT12	1/2" Tile-In Access Tray	
HBLPSPE2448	24" x 48" LOW PROFILE Pan Extension	pg 7	HBLDCOUP	Drain Body Coupler	pg 27
Single Slope Sho	wer Pans & Extensions		HBLDSLOTEXT	Slot Extender Stick	pg 26
HBSSSP3660	Single Slope 36" x 60" Shower Pan	pg 12	Niches & Shelf		
HBSSSP4872	Single Slope 48" x 72" Shower Pan	pg 12	HBDSC	Diamond Shampoo Caddy 8" x 8"	pg 11
HBSSSP6036	Single Slope 60" x 36" Shower Pan	pg 12	HBRSN1616	16" x 16" Recessed Niche	pg 9
HBSSSP7248	Single Slope 72" x 48" Shower Pan	pg 12	HBRSN1628	16" x 28" Recessed Niche	pg 9
HBSSSPE1872	Single Slope 18" x 72" Side Extension	pg 13	HBRBHSN1622	16" x 22" Recessed Barrel Head Niche	pg 9
HBSSSPE7212	Single Slope 72" x 12" Pan Extension	pg 13			
HBTSSSP3660	THIN Single Slope 36" x 60" Shower Pan	pg 18	HBJSCART	Joint Sealant Cartridges 10 oz.	
HBTSSSP4872	THIN Single Slope 48" x 72" Shower Pan	pg 18	HBJSSAUS	Joint Sealant Sausages 20 oz.	
HBTSSSP6036	THIN Single Slope 60" x 36" Shower Pan	pg 18	HBCARTGUN	Cartridge Gun	
HBTSSSP7248	THIN Single Slope 72" x 48" Shower Pan	pg 18	HBSAUSGUN	Sausage Gun	
HBTSSSPE1872	THIN Single Slope 18" x 72" Side Extension	pg 19	HBSAUSTIP	Sausage Gun Replacement Tip	
HBTSSSPE7212	THIN Single Slope 72" x 12" Pan Extension	pg 19	HBSCREWWASHER	100Screws & Washers - 100ct	
Wallboard & Bui	lding Board		HBSCREW1000	Screws - 1,000ct	
HBWB366014	36" x 60" x ¼" Wallboard	pg 2	HBWASH1000	Washers - 1,000ct	
HBWB366012	36" x 60" x ½" Wallboard	pg 2	НВСРК	Corner Putty Knife	
HBWB486412	48" x 64" x 1⁄2" Wallboard	pg 2	HBSPK	Standard Putty Knife	
HBWB489612	48" x 96" x ½" Wallboard	pg 2	HBLPDC	LOW PROFILE Drain Cover (replacement)	
HBWB366058	36" x 60" x %" Wallboard	pg 2	HBLPDCBLACK	LOW PROFILE Drain Cover - Matte Black	
HBWB36601	36" x 60" x 1" Wallboard	pg 2	HBLPDCBRASS	LOW PROFILE Drain Cover - Satin Brass	
HBWB3648112	36" x 48" x 1½" Wallboard	pg 2	HBLPDCBRONZE	LOW PROFILE Drain Cover - Oil Rubbed Bronze	
HBWB44962	44" x 96" x 2" Wallboard	pg 2	HBLPDCCHROME	LOW PROFILE Drain Cover - Polished Chrome	
HBWB48602	48" x 60" x 2" Wallboard	pg 2	HBLPDK	LOW PROFILE Drain Kit (replacement)	
Shower Curbs &	Ramps		HBLPDFK	LOW PROFILE Drain Frame Kit (replacement)	
HBSC60	Standard Curb 60" x 3½" x 4"	pg 8	HBPIPESEAL	Pipe Seal	pg 30
HBSC84	Standard Curb 84" x 3½" x 4"	pg 8	HBUCPLM18	Uncoupling Membrane 36" x 100' x 1/8" (3mm)	pg 31
HBSCM60	MINI Curb 60" x 2" x 2½"	pg 8	HBSHIMKIT	Quick Shim Kit	pg 31
HBSCM84	MINI Curb 84" x 2" x 2½"	pg 8	HBVALVESEAL	Mixing Valve Seal	pg 30
HBLPSR1072	LOW PROFILE Shower Ramp 10" x 72"	pg 7	HBWIPE10	Sealant Cleaning Wipes	

Some SKUs may not be available in all regions. Visit online at www.HYDROBLOK.com for the most up-to-date list of HYDRO-BLOK products and accessories.